

TS-1005: Norstar SMDR6 Configuration

Comm One LLC - Technical Support Documentation

[Support Documentation Index](#)


Friday, March 19, 2010

12:43 AM

NORSTAR SMDR6 COMMANDS

The Nortel Norstar SMDR6 Configuration settings are as follows:

First, select FEATURE 9 * 2 to access the SMDR6 Programming. If you get a printer error that just indicates you are not collecting SMDR yet. If you get an error indicating that the device doesn't exist, then your SMDR6 isn't connected to your Serial port or the power cord has been unplugged.

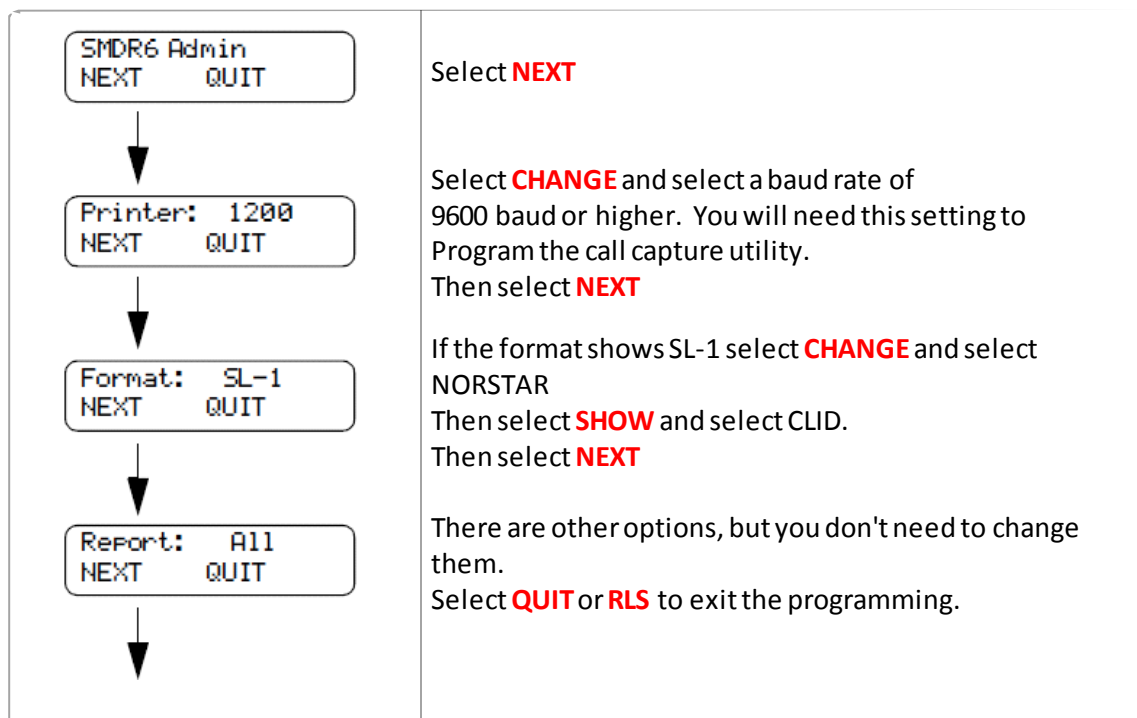

Comm One LLC Technical Support

12723 Whisper Creek Cove

Draper, UT 84020

801-523-9797

support@commone.com

Last Reviewed: 04/02/2010

TS-1005

TS-1005	Date: 04/27/2005 Keywords: SMDR6
---------	-------------------------------------